

Преобразователи сигналов EIB 192

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884


Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: hia@nt-rt.ru || сайт: <https://heidenhain.nt-rt.ru/>

EIB 192

- **Optional:** automatic adjustment of encoder signals (offset, phase, amplitude)
- **Integrated 16384-fold subdivision**
- **Input:** incremental encoders from HEIDENHAIN
- **Output:** position values as per EnDat 2.2, Fanuc Serial Interface, or Mitsubishi high speed interface

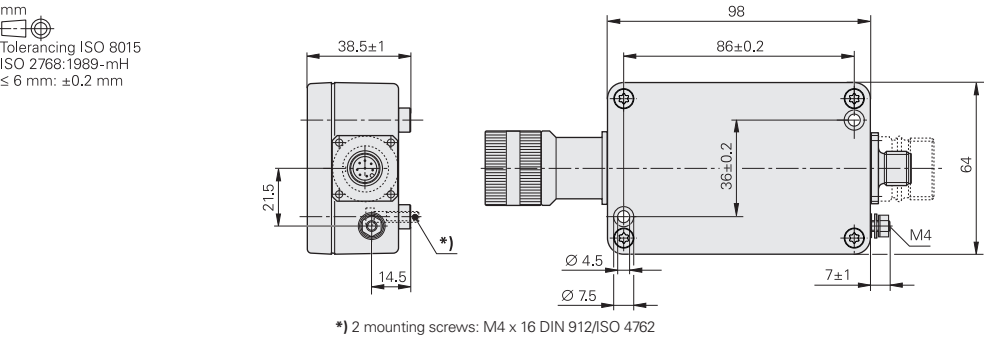

Specifications	EIB 192	EIB 192 F	EIB 192 M
Input	For HEIDENHAIN encoders		
Interface	~ 1 V _{pp} ; input frequency ≤ 400 kHz		
Reference mark	One or distance-coded		
Electrical connection	12-pin M23 flange socket with coupling ring (female)		
Voltage supply for encoders	DC 5 V ±0.25 V (generated from voltage supply for EIB); ≤ 150 mA		
Cable length	≤ 6 m		
Output			
Interface	EnDat 2.2	Fanuc Serial Interface	Mitsubishi high speed interface
Ordering designation	EnDat22	Fanuc02	Mit02-4
Calculation time t _{cal} /clock frequency	≤ 5 μs/≤ 16 MHz	–	–
Electrical connection	8-pin M12 flange socket (male)	17-pin M23 flange socket (male)	
Cable length (with HEIDENHAIN cable)	≤ 100 m ¹⁾	≤ 20 m ²⁾	≤ 20 m ²⁾
Subdivision	≤ 16384-fold (depending on encoder)		
Supply voltage	DC 3.6 V to 14 V		
Power consumption (max.)	3.6 V: < 2000 mW; 14 V: < 2000 mW (including I _{Mmax} = 150 mA)		
Current consumption (typical, without load)	5 V: 130 mA + 1.5 · I _{Mtyp}		
Operating temperature	0 °C to 70 °C		
Storage temperature	–30 °C to 70 °C		
Vibration 55 Hz to 2000 Hz	100 m/s ² (EN 60068-2-6)		
Shock 11 ms	300 m/s ² (EN 60068-2-27)		
Protection EN 60529	IP65		
Mass	≈ 0.3 kg		

Electrical connection

Pin layout of EIB input

12-pin M23 flange socket												
			Power supply				Incremental signals				Limit pos. sign.	
	12	2	10	11	5	6	8	1	3	4	7	9
	U _P	Sensor U _P	0 V	Sensor 0 V	A+	A–	B+	B–	R+	R–	H/L1 ¹⁾	L/L2 ¹⁾
	Brown/ Green	Blue	White/ Green	White	Brown	Green	Gray	Pink	Red	Black	Violet	Yellow

Pin layout of EIB output

8-pin M12 flange socket					17-pin M23 flange socket			
	Power supply				Serial data transmission			
	8	2	5	1	3	4	7	6
EIB 192	U _P	Sensor U _P	0 V	Sensor 0 V	DATA	DATA	CLOCK	CLOCK
EIB 192 F					Serial Data	Serial Data	Request	Request
EIB 192 M							Request Frame	Request Frame
	Brown/Green	Blue	White/Green	White	Gray	Pink	Violet	Yellow

Shield on housing; **U_P** = Power supply voltage
Sensor: The sense line is connected internally with the corresponding power line.
Vacant pins or wires must not be used!

¹⁾ For adjustment purposes only; do not assign in normal operation

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: hia@nt-rt.ru || сайт: <https://heidenhain.nt-rt.ru/>