

Сенсорные датчики SE 661, 660, 640, 540

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884




Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: hia@nt-rt.ru || сайт: <https://heidenhain.nt-rt.ru/>

SE 661, SE 660, SE 640 and SE 540

Transceivers

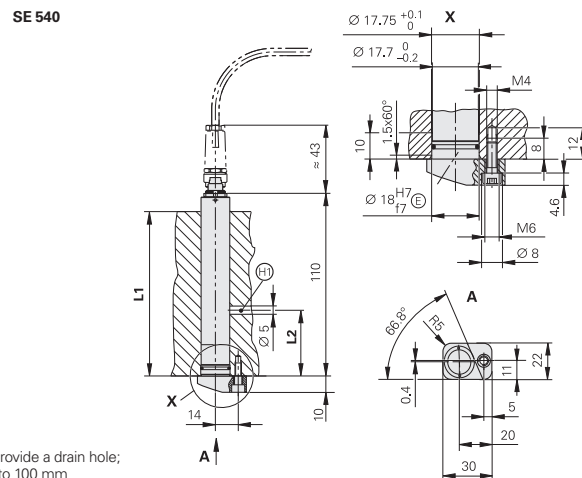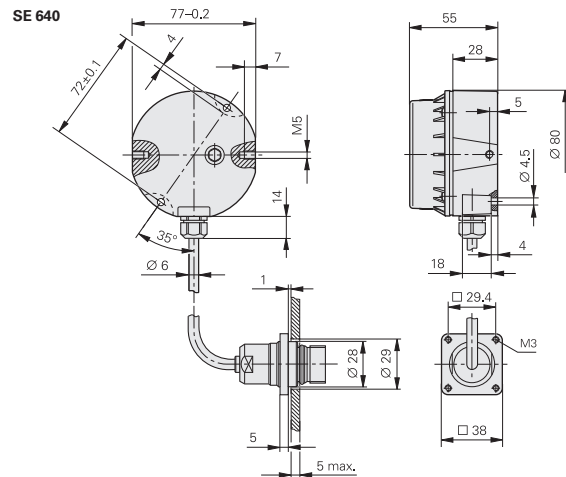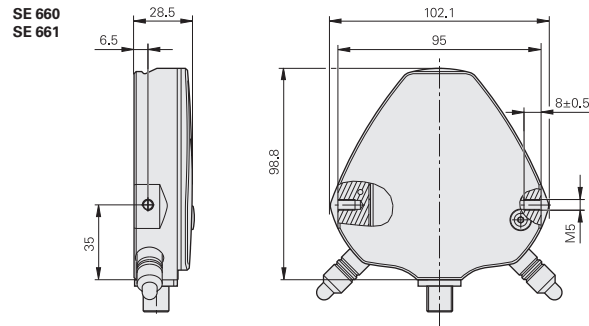

mm
Tolerancing ISO 8015
ISO 2768:1989-mH
≤ 6 mm: ±0.2 mm

⊙ = If L1 > 100: provide a drain hole;
L2 = 10 mm to 100 mm

Transceiver	Radio and infrared		Infrared	
	SE 661	SE 660	SE 640	SE 540
Use with	TS 460, TS 760 and TT 460; any number may be connected	TS 460, TS 760 and TT 460; up to four each may be connected (depending on version)	TS 460, TS 642, TS 760	
Signal transmission	Radio or infrared		Infrared	
Area of application	In working space of machine			In location hole in the spindle head
Interface	Serial data (EnDat 2.2) • Activation • Trigger signal • Ready signal • Diagnosis	Square-wave signals (HTL) • Start signals R(-TS) and R(-TT) • Ready signals B(-TS) and B(-TT) • Trigger signals S and $\bar{S}$ • Battery warning $\bar{W}$	Square-wave signals (HTL) • Start signal R • Ready signal B • Trigger signal $\bar{S}$ • Battery warning $\bar{W}$	
Optical status indicator	For infrared transmission, radio transmission, radio channel quality, channel, operating mode and whether workpiece or tool touch probe		For infrared transmission and errors	For touch-probe status
Electrical connection*	8-pin M12 flange socket	12-pin M12 flange socket	Cable, 0.5 m or 2 m with 7-pin M23 connector	8-pin M9 flange socket
Cable length	≤ 50 m	≤ 20 m with adapter cable Ø 6 mm ≤ 50 m with adapter cable Ø 6 mm and adapter cable Ø 8 mm for extension		≤ 30 m with adapter cable Ø 4.5 mm ≤ 50 m with adapter cable Ø 4.5 mm and adapter cable Ø 8 mm for extension
Supply voltage	DC 15 V to 30 V			
Current consumption without load ¹⁾				
Infrared				
Normal operation	3.8 W _{eff} (≤ 220 mA _{eff})	3.4 W _{eff} (≤ 200 mA _{eff})	5.1 W _{eff} (≤ 250 mA _{eff})	3.7 W _{eff} (≤ 150 mA _{eff})
Transmission	12 W _{PK} (≤ 755 mA _{PK})	10.7 W _{PK} (≤ 680 mA _{PK})	8.3 W _{PK} (≤ 550 mA _{PK})	4.3 W _{PK} (≤ 210 mA _{PK})
Radio	2.4 W _{eff} (≤ 135 mA _{eff})	2.1 W _{eff} (≤ 120 mA _{eff})	–	–
Protection EN 60529	IP68			
Operating temperature	10 °C to 40 °C			10 °C to 60 °C
Storage temperature	–20 °C to 70 °C			–20 °C to 70 °C
Mass without cable	≈ 0.3 kg		≈ 0.2 kg	≈ 0.1 kg

* Please select when ordering

¹⁾ At minimum supply voltage

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47

эл.почта: hia@nt-rt.ru || сайт: <https://heidenhain.nt-rt.ru/>